## LINIAR UPVC DOOR HINGE ADJUSTMENTS

### (RESI DOOR, FRENCH DOOR, STABLE DOOR)

## FIRST REMOVE COVER CAPS CAREFULLY (PULL STRAIGHT OUT) WITH SUITABLE TOOL




5mm Ällen key gives + 4mm Height Adjustment (ON TOP OF HINGE) Replace cover caps when adjustment is finished



5mm Allen key gives +/- 4mm Lateral Adjustment (ON SIDE OF HINGE) Replace cover caps when adjustment is finished

# TO REMOVE DOOR FROM FRAME -Remove top and bottom cover caps. Refitting is the reversal of the removal.

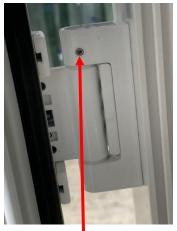

Open door to approx 90° to gain access to grub screw 2mm Allen key required- slacken off grub screw

WEST LANCS TRADE PLASTICS



With grub screw suitably slackened off, gentlely tap pin out from underside off hinge with a suitable tool and remove pin from the top



5mm Allen key gives +/- 1mm Compression Adjustment (ON TOP OF HINGE) Replace cover caps when adjustment is finished

## NOTES:

Consideration must be made when adjusting hinges that the door is correctly "toe and healed" prior to adjusting hinges.

Ensure that the weight of the door is equally supported on all the available hinges on the door, and not to overstress a hinge or hinges.

When adjusting compression please take note of the position of the scribe marks on the head of the allen bolt. The 2mm allen grub screws may need slackening prior to compression adjustment if resistance is felt.

Tighten all grub screws and replace all cover caps when adjustment is complete.

NOV 22 v1.00

www.westlancstradeplastics.co.uk

#### WEST LANCS TRADE PLASTICS